

BARCODE CARD

R-iZO®

Default Commands

Nr.	Befehl	Barcode
[Nr.1]	Authentication (ok)	 * \$ R I Z O + B % O K A Y *
[Nr.2]	Abortion	 * \$ R I Z O + B % A B R T *
[Nr.3]	Administration of assembly groups	 * \$ R I Z O + B % M A N J O B *
[Nr.4]	previous step*	 * \$ R I Z O + B - P R E S T P *
[Nr.5]	following step*	 * \$ R I Z O + B - N X T S T P *

MASTERBEFEHLE

Nr.	Befehl	Barcode
[Nr.6]	delete ONE assembly group	 * \$ R I Z O + B % D E L J O B *
[Nr.7]	delete ALL assembly groups ATTENTION-not reversable!	Code is on the back- just to use to reset the system

SONDERBEFEHLE*

Nr.	Befehl	Barcode
[Nr.8]	group	 * \$ R I Z O + B % G R P M O D *
[Nr.9]	Loop on	 * \$ R I Z O + B % L O O P O N *

*just possible for advanced + x-pert

COLORCODES

Color	Barcode f. highest brightness
	 * \$ R I Z O + B / 0 0 0 0 4 0 *
	 * \$ R I Z O + B / 0 0 6 4 0 0 *
	 * \$ R I Z O + B / 0 0 4 0 4 0 *
	 * \$ R I Z O + B / 4 0 0 0 4 0 *
	 * \$ R I Z O + B / 4 0 0 0 0 0 *
	 * \$ R I Z O + B / 4 0 0 0 0 0 *
	 * \$ R I Z O + B / 4 0 4 0 0 0 *

If you want a different light intensity,
please contact to our support.

MASTERBEFEHLE

Nr.	Befehl	Barcode
[Nr.7]	deleting ALL assembling groups! ATTENTION! not reversable!	 * \$ R I Z O + B % D E L A L L *

*just possible for advanced + x-pert